




Please read all instructions prior to installation & keep for future reference.

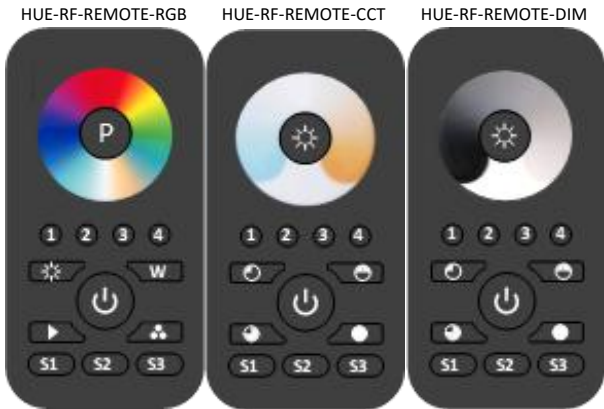

Model Number	HUE-RF-REMOTE
Radio Frequency	869.5/916.5/434MHz
Power Supply	4.5V (3 x AAA battery)
IP Rating	20
Operating Temperature	32°-104° F
Dimensions	4.75"H x 2.25"W x 0.75"D

Product Information

- Controls up to 4 zones of RF controllers separately or grouped together
- Compatible with HUE-DMX-CONTROLLER & HUE-RF/WIFI-CONTROLLER
- One controller can be paired with a maximum of eight different remotes


Operating Instructions

Pairing Remote with Controllers:

1. Turn on the HUE-RF/DMX-REMOTE
2. Short press the "Learning Key" on the controller
3. Short press a zone number: 1, 2, 3 or 4

Safety Information: This device contains AAA batteries that should be stored and disposed of properly / DO NOT expose the device to moisture.

All Omnilight products are tested and warranted for use exclusively with Omnilight power supplies

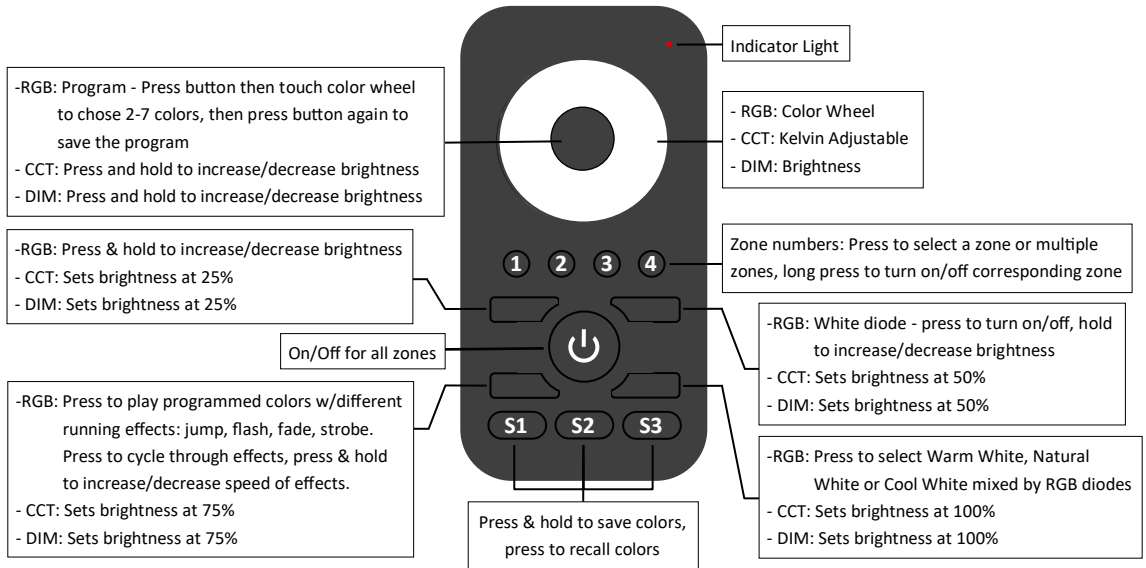

Operating Instructions (continued)

4. Touch the display wheel on the HUE-RF-REMOTE, the LED ribbon connected to the controller will flicker once.

THIS INDICATES THAT THE PAIRING WAS SUCCESSFUL

Using the Remote After it is Paired:

1. Turn on the HUE-RF-REMOTE
2. Press the paired zone number and/or numbers you'd like to control
3. Press the color wheel or other buttons to control the ribbon

How to Delete Pairing:

REFER TO HUE-RF/WIFI-CONTROLLER OR HUE-DMX-CONTROLLER INSTRUCTIONS